

**PYLE®
view**

 
**Operating
Instructions**

PLHR78W PLHR79



[HTTP://WWW.PYLEAUDIO.COM](http://www.pyleaudio.com)

STRUCTURE

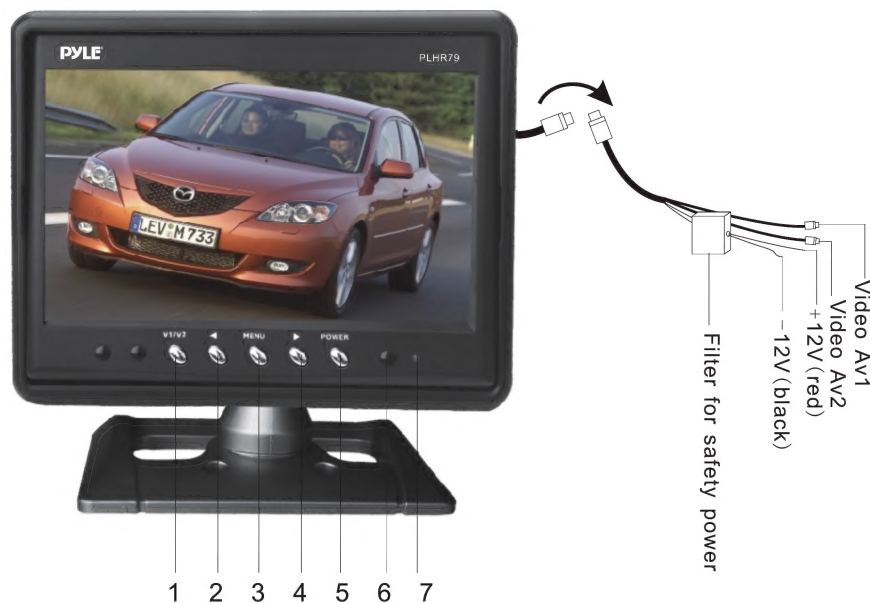

1. V1/V2 (Video1, Video2)
2. Reduce Button
3. Menu (brightness, volume, Color, contrast) buttons
4. Increase Button
5. Power on/off
6. Remote controller receiver
7. Power indicator light

SPECIFICATION:

Name: STAND COLOR TFT LCD
 Resolution pixel: 1440x234Dots
 System: PAL / NTSC
 Power: DC 12V \pm 10%
 Video frequency: AV input
 Power consumption: 8W
 Screen size: 7 inch (16:9)
 Remote control: full function 6m

OPERATION INSTRUCTION.

AV Display Mode:

 
Operating method: Press the button "AV1/AV2" on the remote control unit to choose AV display mode. If the VCD or DVD signal is connected, there should be display normally pictures signal; If the VCD or DVD signal isn't connected, AV character should appear top the left corner and the screen is blue.. the system will display "NO SIGNAL".

1. BRIGHTNESS
2. CONTRAST
3. COLOR
4. TINT (only NTSC system)
5. SCALING (16: 9/4: 3)

The above functions can be executed by MENU on the display or remote control unit.

1. Brightness: Press the MENU button on the display or MENU on the remote control unit, then press: "◀" "▶" button on the display or "▲" "▼" keys on the remote control unit to choose what you need.
2. COLOR: Press the MENU button on the display or MENU on the remote control unit thrice, then press: "◀" "▶" button on the display or "▲" "▼" keys on the remote control unit to choose what you need.
3. Contrast Ratio: Press the MENU button on the display or MENU on the remote control unit twice, then press: "◀" "▶" button on the display or "▲" "▼" keys on the remote control unit to choose what you need.
4. TINT: Press the MENU button on the display or MENU on the remote control unit four times, then press: "◀" "▶" button on the display or "▲" "▼" keys on the remote control unit to choose what you need.
5. scaling: Press the MENU button on the display five times, then press: "▶" "◀" button on the display to choose.


The use of remote control

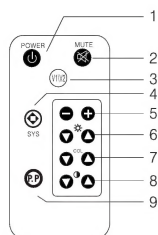


- 1.power: switch on/off power
- 2.mute: press this button,the sound disappear.
- 3.V1/V2: V1/V2 switch
- 4.Reverse:Turn the picture from left to right or up to down.
- 5.vol+/-:Press them to increase and decrease the volume.
- 6.⊗+/-:Press them to increase and decrease the brightness.
- 7.col+/-:press them to increase and decrease the color.
- 8.🔍 Press them the increase and decrease contrast.
- 9.📺 Mode: press it to select the mode (standard, brightness, soft, Vividness.self-defined.)

Replacing the battery

 - 1** Insert your finger nails into A and B on the diagram below, press A according to the direction, then pull out the battery holder.

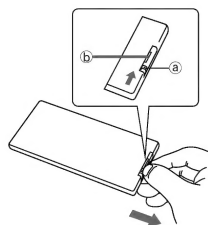


 - 2** Remove the old battery, then insert the new battery into the battery holder with the + side facing upwards.



Lithium battery (Cr2025)

 - 3** Fit the battery holder back to its place.

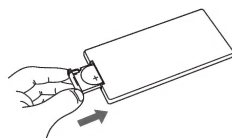

Note:

To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control unit for long periods of time (one month or more). If the battery leaks fluid, carefully wipe it out of the battery case, then change to a new lithium battery.

6. SIMPLE TROUBLE-SHOOTING GUIDE

Below symptom no mean this production have been broken, Please check before you repair !

Symptom	Probable Cause	Solution
Black Screen	<ol style="list-style-type: none"> 1.No 12 voltage 2.Brightness or contrast ratio is too small 3.no high-voltage 	<ol style="list-style-type: none"> 1 .check the power is on or connect rightly 2. check the A/V Cable is loose or not 3. Increase the brightness and contrast ratio
NO picture	<ol style="list-style-type: none"> 1.No sources output 2.The video concentric plug becomes loose 	<ol style="list-style-type: none"> 1. Check the output of VCD or DVD 2. Replace with the A/V cable 3. Tighten the Video input cable
color picture	<ol style="list-style-type: none"> 1 Video sources have no output 2.Color ratio should be re-adjust 	<ol style="list-style-type: none"> 1.check the video sources 2.Enter into the Menu to re-adjust
With a little regular light spots and color spots on the screen or black horizontal line in the picture	It is normal symptom in the active matrix display technology.	it is normal symptom in view range with a little regular light spots on display screen.
Unclear picture	<ol style="list-style-type: none"> 1.Poor quality of the video sources 2.Bright & Contrast 	<ol style="list-style-type: none"> 1.Replace with the high quality videodisc 2.Reset Bright & contrast.
The outer cover of the monitor has been deformed	<ol style="list-style-type: none"> 1.External temperature is too high 2. The power has not been switch off for a long time 	<ol style="list-style-type: none"> 1.The surround temperature could not exceed to 0° -60° 2.Turn off the power after using the unit